



Forsite
Connected Safety™

Quick Guide Wearable Set-Up & Status

V1.3


Set Up Wearable



Power on tablet and **tap the Forsite companion app**.



If not already linked, tap Touch on/off device.



Select your user profile, or create another user profile.

For existing user profiles, if any worker group has been assigned, it is presented in brackets.


This is important because **alerts are provided to all users or can be aligned to specific worker groups**.

Selecting a worker group for a profile is **optional** (e.g. Traffic controller).

Place your wearable **face down** with the **bottom end flat against the tablet NFC** to touch on.



Insert wearable into the holster and place onto arm.

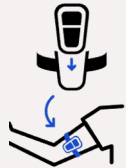

Note: Be cautious of applying pressure to duress button.

Set Up Wearables

If the wearable LED is flashing **Purple**, it needs to be paired to the base station and then activated:

- 1. Pair the wearable** - Take the wearable out of the charger and touch on the device by tapping the bottom of the wearable onto the tablet as per the previous slide. Once the wearable is touched on, the LED will now flash **White** and will need to be activated. *The wearable will conserve battery and not provide alerts until you activate it.*
- 2. Activate the wearable** - Press the duress button on the front of the wearable for 2 seconds, there will be an audible activation sound along with a green flashing light. The light will then periodically flash **blue** showing the wearable is connected.













If the wearable LED is flashing **White**, it is already paired to the base station however, it will need to be activated:










- 1. Identify your wearable** - On the tablet, head to 'Touched On Users' page find your device and click 'Identify'. The wearable shall present light and haptic feedback whilst in the charger for you to extract. *The wearable will conserve battery and not provide alerts until you activate it.*
- 2. Activate the wearable** - Press the duress button on the front of the wearable for 2 seconds, there will be an audible activation sound along with a green flashing light. The light will then periodically flash **blue** showing the wearable is connected.



Alert Configuration

	Wearable Status	Light	Sound	Vibration
Alert Level Status	Notice Alert lowest severity	 4 green flashes	N/A	 2 short buzzes
	Warning Alert medium severity	 4 yellow flashes	 2 short beeps	 2 long buzzes
	Alarm Alert highest severity	 5 red flashes	 4 long beeps	 4 rapid buzzes
	Duress Alert user-activated high alert	 5 purple flashes	 5 long beeps	 5 rapid buzzes

Alerts - Charging and Connection Status

	Wearable Status	Light	Sound	Vibration
Charging Status	Low Battery	 red flashes	N/A	N/A
	Charging when placed in Charger	 green flashes	N/A	N/A
	Fully Charged when placed in Charger	 solid green light	N/A	N/A
	Updating with firmware (via USB)	 alternate blue, yellow, white flashes	N/A	N/A
Connection Status	Waiting to Pair tap onto Tablet duress button to activate	  not tapped: purple flashes not activated: white	N/A	N/A
	Touched On/Off paired to Base Station	  on: 2 green flashes off: 2 red flashes	N/A	N/A
	Activated by pressing the duress button	 1 green flash	 1 short beep	N/A
	Connected in-range and paired to Base Station	 blue flashes	N/A	N/A
	Out of Range paired but too far from Base Station	 yellow flashes	N/A	N/A

Help Desk



Contact

Forsite Safety Help Desk

Phone: (+61) 03 4150 9928

Portal: <https://forsite.freshdesk.com/>

Email: support@forsitesafety.com